


WINDSOR COLLECTION


DOUBLE ROBE HOOK 224132

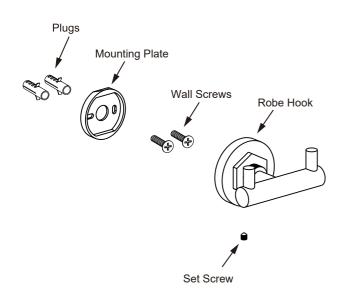

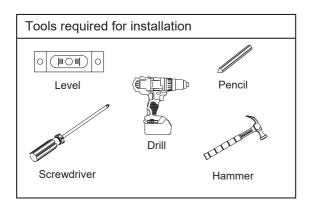

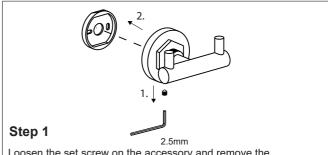

Loosen the set screw on the accessory and remove the backing plate. Position the accessory against the wall and mark outline with pencil.

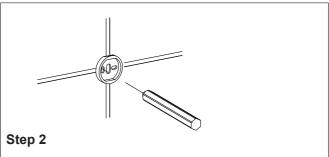

Position the backing plate flat side down on the wall and mark holes with pencil.

