



SEVILLE COLLECTION


DOUBLE SDH KNOB

1887502

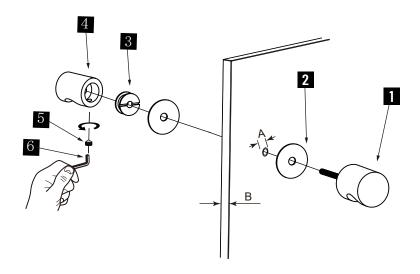


1.Knob-A x 1 2.Clear Gasket x 2 3.Fixing Bracket x 1 4.Knob-B x 1 5.Set Screw M5 x 1 6.Allen Key 2.5mm x 1

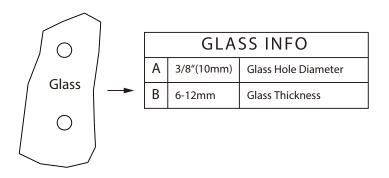


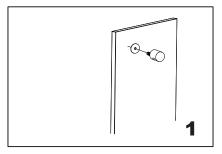


Install the knob-A (bolt) through the glass hole, make sure the rubber gaskets are between knob&glass.

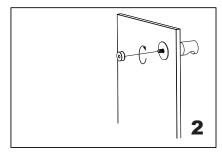

Screw in the fixing bracket into the hnob-A bolt.

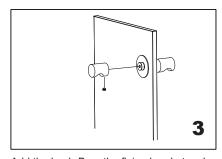

Add the knob-B on the fixing bracket,make sure the set screw hole in the bottom.

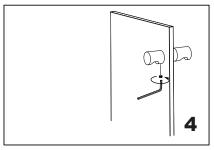

Fix the set screw on the knob-B, tighten it to avoid loose from fixing brackets.