


WINDSOR COLLECTION

TOWEL BARS

12"	224120
18"	224180
24"	224240
30"	224300

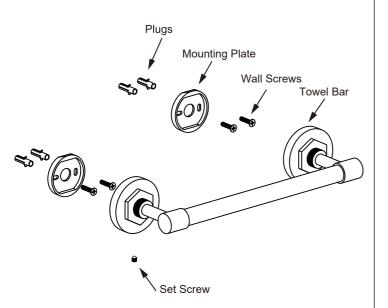


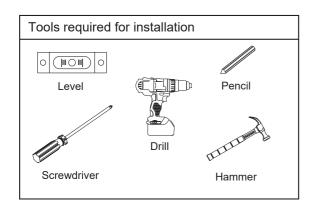

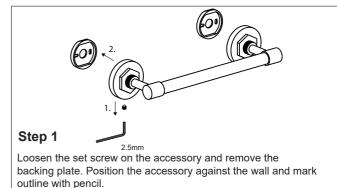


Step 2

Position the backing plate flat side down on the wall and mark holes with pencil.

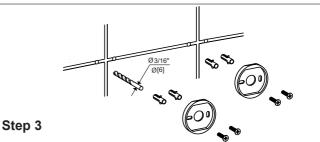

Predrill 3/16" holes on the wall to fit wall plugs. Insert wall plugs into the wall. Position backing plate flat side down over the plugs and install screws.

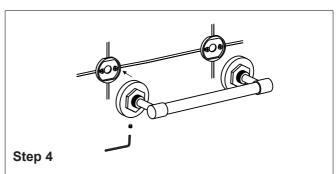

Slide the accessory onto the backing plate and tighten the set screw using Allen key provided.