




## **MILAN COLLECTION**

## **DOUBLE SDH KNOB** 2547502

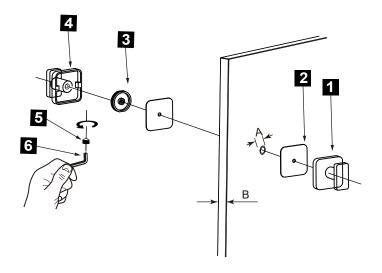


- 1. Knob -A x 1
- 2. Clear Gasket x 2
- 3. Fixing Bracket x 1
- 4.Knob-B x 1
- 5. Set Screw M5 x 1
- 6. Allen Key 2.5mm x 1

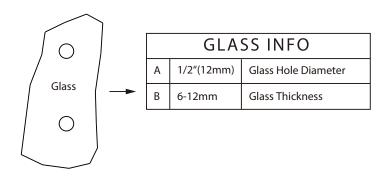


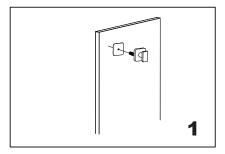


Install the knob (bolt) through the glass hole, make sure the rubber gaskets are between knob&glass.

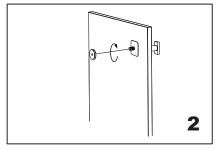

Screw in the fixing bracket into the knob bolt.

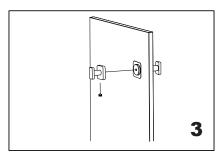

Add the end cap on the fixing bracket,make sure the set screw hole in the bottom.

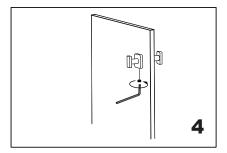

Fix the set screw on the end cap,tighten it to avoid loose from fixing brackets.