
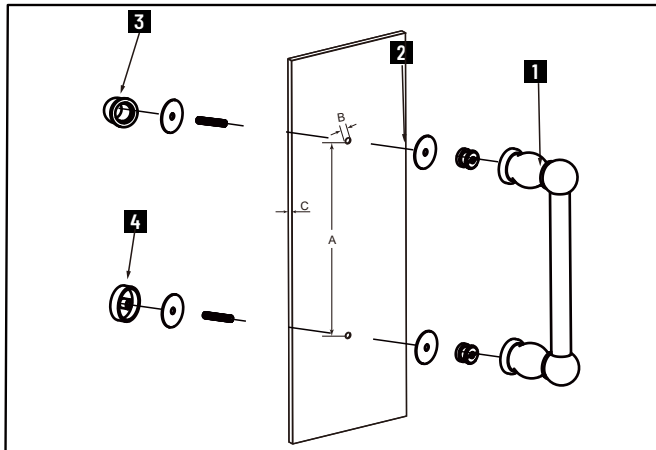



FLORENCE COLLECTION

SINGLE KNOB(TO BE PAIRED WITH SINGLE SDH)


3227503




- 1.Handle x 1
- 2.Clear Gasket x 2
- 3.Knob x 1
- 4.End Cap x 1

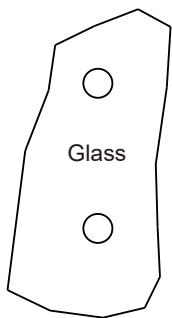


GLASS INFO		
A	1/2"(12mm)	Glass Hole Diameter
B	6-12mm	Glass Thickness

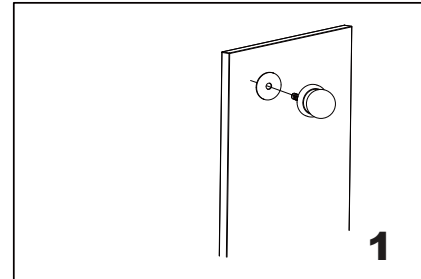

Install the knob (bolt) through the glass hole, make sure the rubber gaskets are between knob&glass.

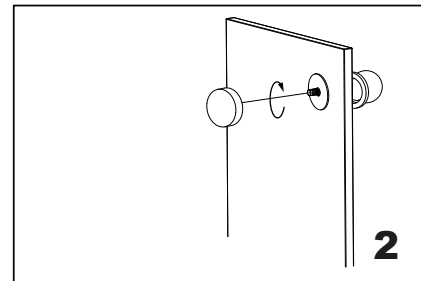

Screw in the end cap into the knob bolt.

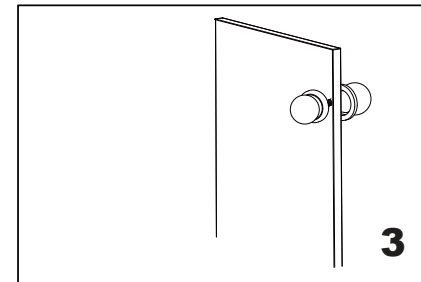

Tighten the knob & end cap to avoid loosing.