
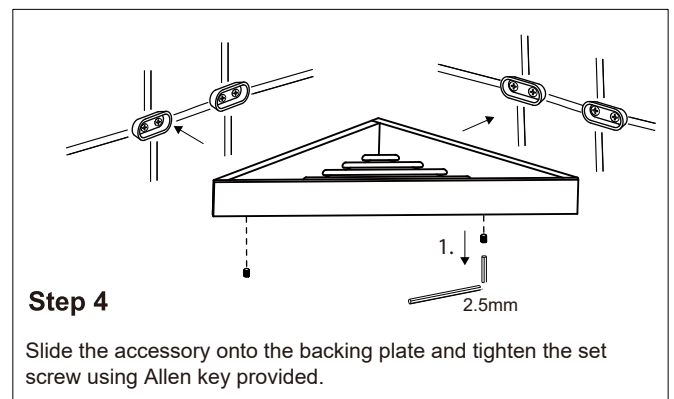
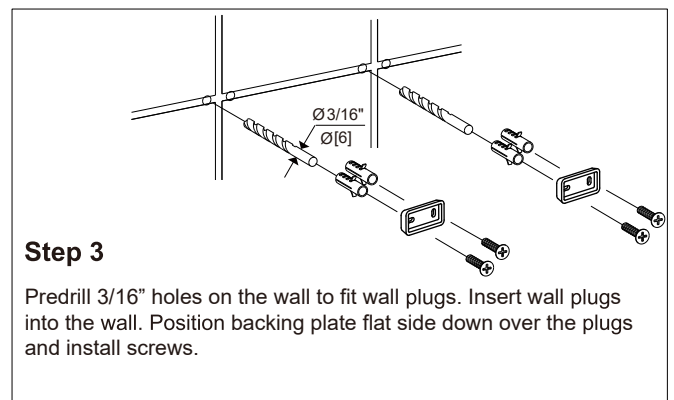
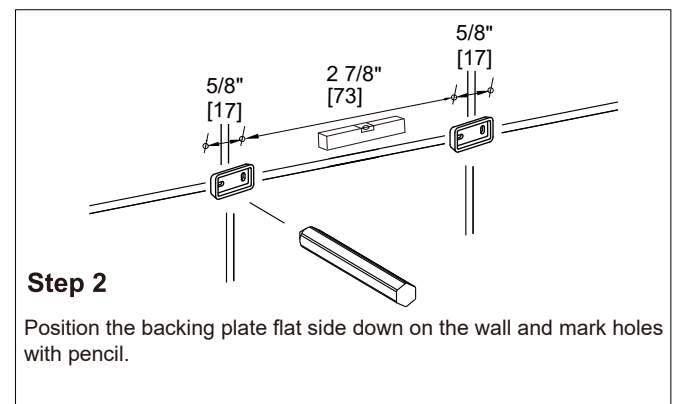
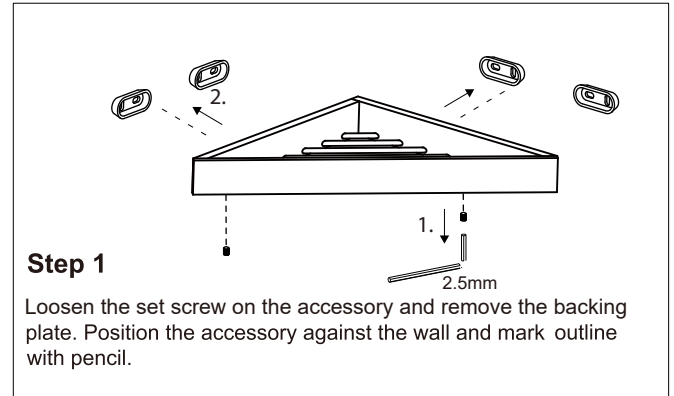


## HAMBURG COLLECTION

### CORNER SHOWER BASKET

440606

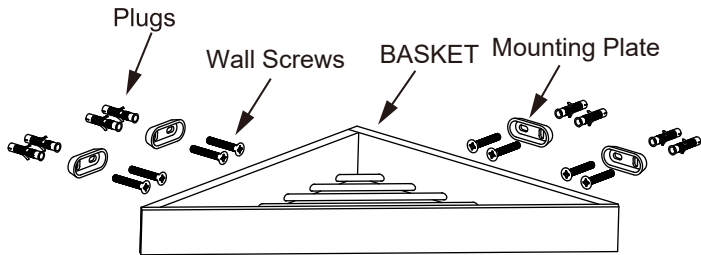

Tools required for installation

Level

Pencil

Screwdriver

Drill

Hammer