


## HOTEL ITEMS

### DOUBLE TOILET PAPER HOLDER WITH SHELF

711155

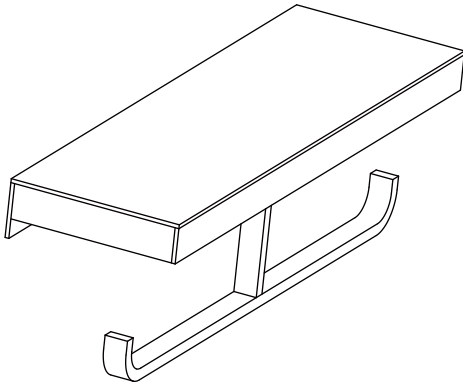


#### Tools required for installation




Level



Pencil

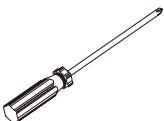


Screwdriver



Drill




Hammer

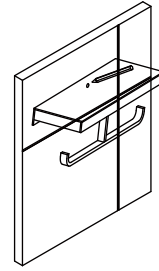


#### Step 1

Position the shower shelf against the wall and mark the holes with pencil.

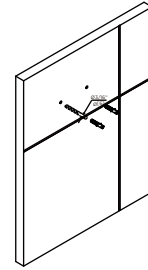


#### Step 2

Predrill 3/16" holes on the wall to fit wall plugs. Insert wall plugs into the wall.

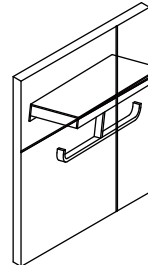

#### Step 3

Install screws into the wall and tighten them, ensure the product is level.

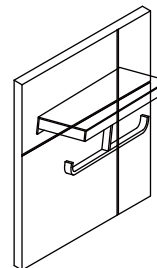

#### Step 4

Install the end caps onto the set screws.