


HOTEL ITEMS RECESSED TOILET PAPER HOLDER


828159

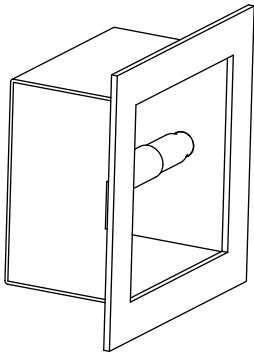

Tools required for installation




Level

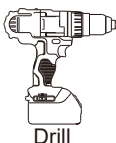

Drill




Pencil

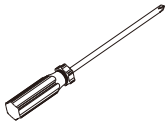

Screwdriver




Hammer

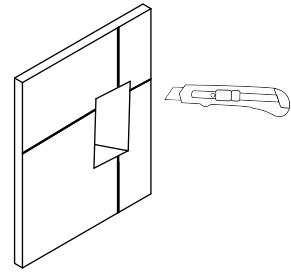


Step 1

Cut out the wall according to the outline of the paper box body.

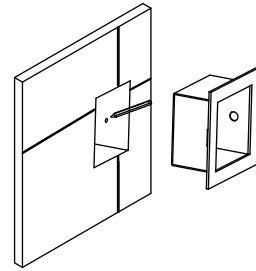


Step 2

Position the shower shelf against the square and mark the holes with pencil.

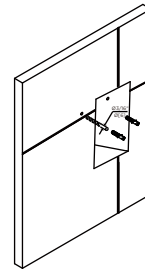


Step 3

Predrill 3/16" holes on the wall to fit wall plugs. Insert wall plugs into the wall.

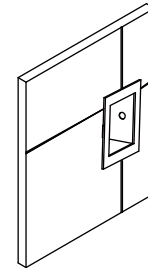

Step 4

Install screws into the wall and tighten them, ensure the product is level.

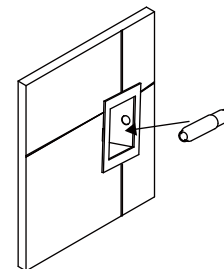

Step 5

Install the spring post into the tissue box.