



## **FREE STANDING**

## **TISSUE HOLDER-FLORENCE**


KFS-FL-TP

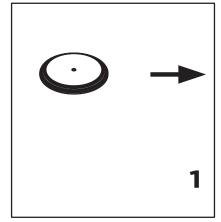

Take out part 4.

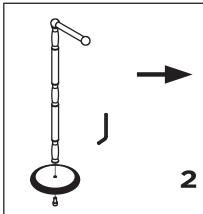

Align the tissue holder to the mouting holes on the bottom part, and use the Allen key to screw through from the back of the bottom and tighten it.

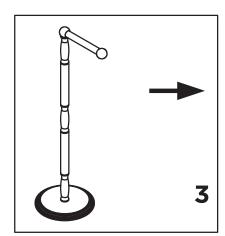

Finish assembling.